

märklin
H0



Modell des Zwischenwagens ICE 3

Hinweis: Häufiges An- und Abkuppeln der Wagen vermeiden. Kupplungswechsel nur im Märklin-Service möglich.

Tip: Avoid coupling and uncoupling the cars frequently. Couplings may only be replaced by Märklin service.

Remarque : Éviter d'accoupler et de désaccoupler fréquemment les voitures. Changement d'attelage possible uniquement au service Märklin.

Opmerking: Veelvuldig aan- en afkoppelen van de rijtuigen dient vermeden te worden. Het vervangen de koppeling is alleen mogelijk bij een Märklin service afdeling.

 

 
Nota: Evite enganchar y desenganchar los vagones con frecuencia. El cambio de enganche es sólo posible en servicio Märklin.

Avvertenza: Evitare un frequente agganciamento e sganciamento delle carrozze. L'attacco può essere sostituito solo presso l'assistenza Märklin.

Observera: Undvik att alltför ofta koppla vagnarna till - och från. Byte av koppling kan endast göras hos Märklin-Service.

Tip: Undgå unødvendig til- og afkobling af vognene. Udsiftning af kobling kun mulig ved Märklin-service.


Zug kuppeln
Coupling the train
Accoupler le train
Trein koppelen
Operación de enganche del tren
Accoppiamento dei treni
Tåget kopplas
Kobling af togstamme

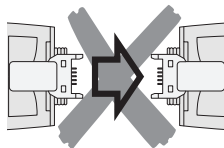

max. 8



Gehäuse abnehmen
Removing the body
Enlever le boîtier
Kap afnemen
Retirar la carcasa
Smontare il mantello
Kápan tas av
Overdel tages af

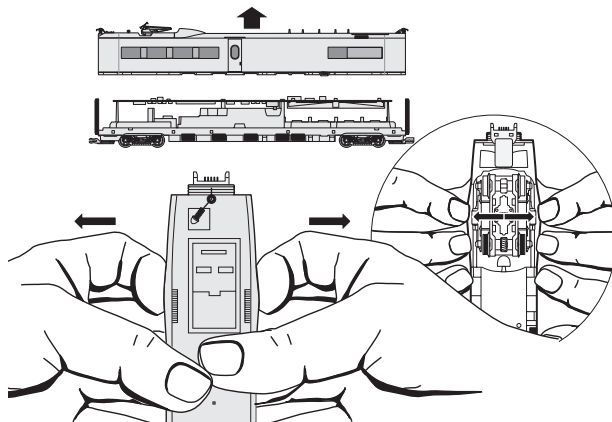

Dachstromabnehmer auswechseln
Changing pantographs
Remplacement du pantographe
Vervanging van de stroombeugel
Cambiar el pantógrafo
Sostituzione dei pantografi
Byte av strömavtagare
Udskiftning af pantograf

